



INSTALLATION & REMOVAL of **QUICKMARK** PERMANENT MARKER

EASY TO INSTALL ON LIVE OVERHEAD LINES

- Open the 10-70 or 6-16 clamp as shown
- Push the unit up against the conductor and the clamp snaps shut


Install with Red Apply Tool 1024
for 10-70 clamp



1. Pull on the rings until the clamp stays open
Attach tool to a hotstick



2. Pull the clamp ring over the peg on left cup of tool
3. Swing the spring loaded right cup to the left & put clamp into cup. Release cup so clamp is held in tool.
See diagram below

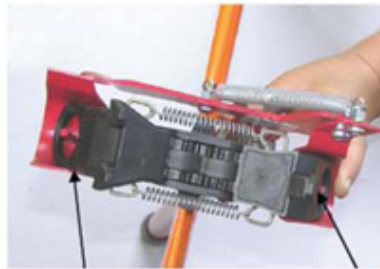

Shows rings hooked over peg

Install with Orange Apply Tool 1027
for 6-16 clamp



EASY TO REMOVE

Remove either clamp size
with Removal Tool 1005

